

A7CA Pram Hood Register

XL Reference Numbers

XL 98	Induction pipe	BE 21
XL 125	Fan bearing pulley	BB 25
XL 145	Crankshaft	BB1
XL 147	Piston	BC 50/56
XL 150	Connecting rod (1)	BC 43
XL 253	Steering box (1)	BM 24
XL 254	Steering box cover	BM 49
XL 255	Steering lever bush	
XL 256	Steering inner column	
XL 257	Worm gear	
XL 258	Bottom bush (worm)	
XL 259	Steering worm wheel	
XL 260	Top thrust washer (worm)	
XL 261	Control bracket tube socket	
XL 262	Control bracket (ign/gas)	
XL 263	Steering outer column	
XL 264	Steering outer column lower threaded portion	
XL 265	Control bracket tube nut	
XL 266	Ignition control lever	
XL 267	Ignition control lever grub screw	
XL 268	Ignition control lever friction block	
XL 269	Steering wheel	
XL 270	Steering lever (drop arm)	
XL 271	Carburettor control lever	
XL 272	Control bracket tube	
XL 273	Ignition control tube	
XL 274	Throttle control tube	
XL 291	Steering side tube ball pin	
XL 292	Steering thrust block	
XL 293	Steering side tube cap	
XL 294	Steering thrust block (fixed)	
XL 298	Steering side tube	
XL 318	Throttle control lever	BF 12
XL 319	Magneto control lever (short)	BM 57
XL 320	Carburettor control lever (long)	BM 59
XL 411	Cylinder end plug	BC 14
XL 426	Cylinder foot studs	BA 25
XL 462	Oil baffles	BA 37
XL 502	Aluminium sump	BA 71
XL 507	Side water inlet branch	BD 47
XL 510	Oil pump base	BA 104
XL 524	Sump plug	BA 79 / BH 30 / BO 11
XL 528	Con rod (2)	BC 43
XL 533	Swivel axle lever	BM 96
XL 534	Steering arm (n/s)	
XL 535	Steering joints (o/s)	BM 91/92
XL 537	Steering adjuster (track rod)	BM 82
XL 538	Steering screw end (track rod)	BM 83
XL 553	Gearbox top	BH 5
XL 559	Gear lever change box	BH 15
XL 565	Front axle (no shock absorber)	

XL 566	Front back plates o/side	BL 43
XL 567	Front back plates n/side	BL 34
XL 585	Accelerator pedal	BF 1
XL 600	Ignition control lever	BM 11
XL 624	Gearbox plug and filler plug	BA 79
XL 633	Wheel nut	BS 6
XL 667	Crankcase	BA 1
XL 675	Rear axle near/offside	BO 38/39
XL 744	Magneto control lever	BF 15/29
XL 753	Starting nut	BB 36
XL 845	Cylinder head (1)	BC 1/28
XL 887	Crankcase	BA 1
XL 888	Timing gear case	BA 2
XL 889	Timing gear cover	BA 84
XL 896	Steering box (2)	BM 24
XL 914	Gearbox back plate	BH 10
XL 917	Starting handle mounting	BD 9
XL 919	Front hub cap (aluminium)	BL 21
XL 920	Rear hub cap (aluminium)	BL 46
XL 924	Gear lever	BH 20
XL 930	Gearbox casing	
XL 950	Gearbox (1)	BH 1
XL 960	Carburettor control lever	BF 12
XL 963	Cylinder block	BC 30
XL 972	Brake compensating lever o/s	BN 14
XL 973	Brake compensating lever n/s	BN 15
XL 974	Rear brake adjusting nut	BN 9
XL 985	Inlet manifold	BE 21
XL 986	Accelerator pedal (2)	BF 1
XL 988	Hand control bracket	BM 6
XL 989	Control bracket – steering	BM6
XL 994	Exhaust manifold	BE 30
XL 1025	Fan blade	BD 21
XL 1028	Fan spindle bracket (1923 type)	
XL 1057	Pinion 9 teeth 7/8" dia	
XL 1064/66	Hand-operated starter	not listed
XL 1084	Brake pedal lever	BN 1
XL 1093	Clutch pedal	BN 35
XL 1094	Brake pedal	
XL 1128	Fan spindle bracket	BD 34
XL 1133	Fan bearing (small pulley)	BD 25
XL 1134	Dynamo casing	BG 3
XL 1136	Front bracket adjusting screw boss	BK 21
XL 1150	Front axle (1)	BL 1
XL 1164	Gearbox top	BH 5
XL 1168	Starter motor housing (CAV)	BG 54
XL 1169	Starter drive housing	BG 64
XL 1190	Front axle (2)	BL 1
XL 1195	Camshaft	BB 18
XL 1214	Stub axle (n/s)	
XL 1215	Stub axle (o/s)	
XL 1251	Fan bearing (large pulley)	BD 25
XL 1253	Cylinder head (2)	BC 1/28
XL 1354	Carburettor control lever	BM 72

